


AEG 41 WU

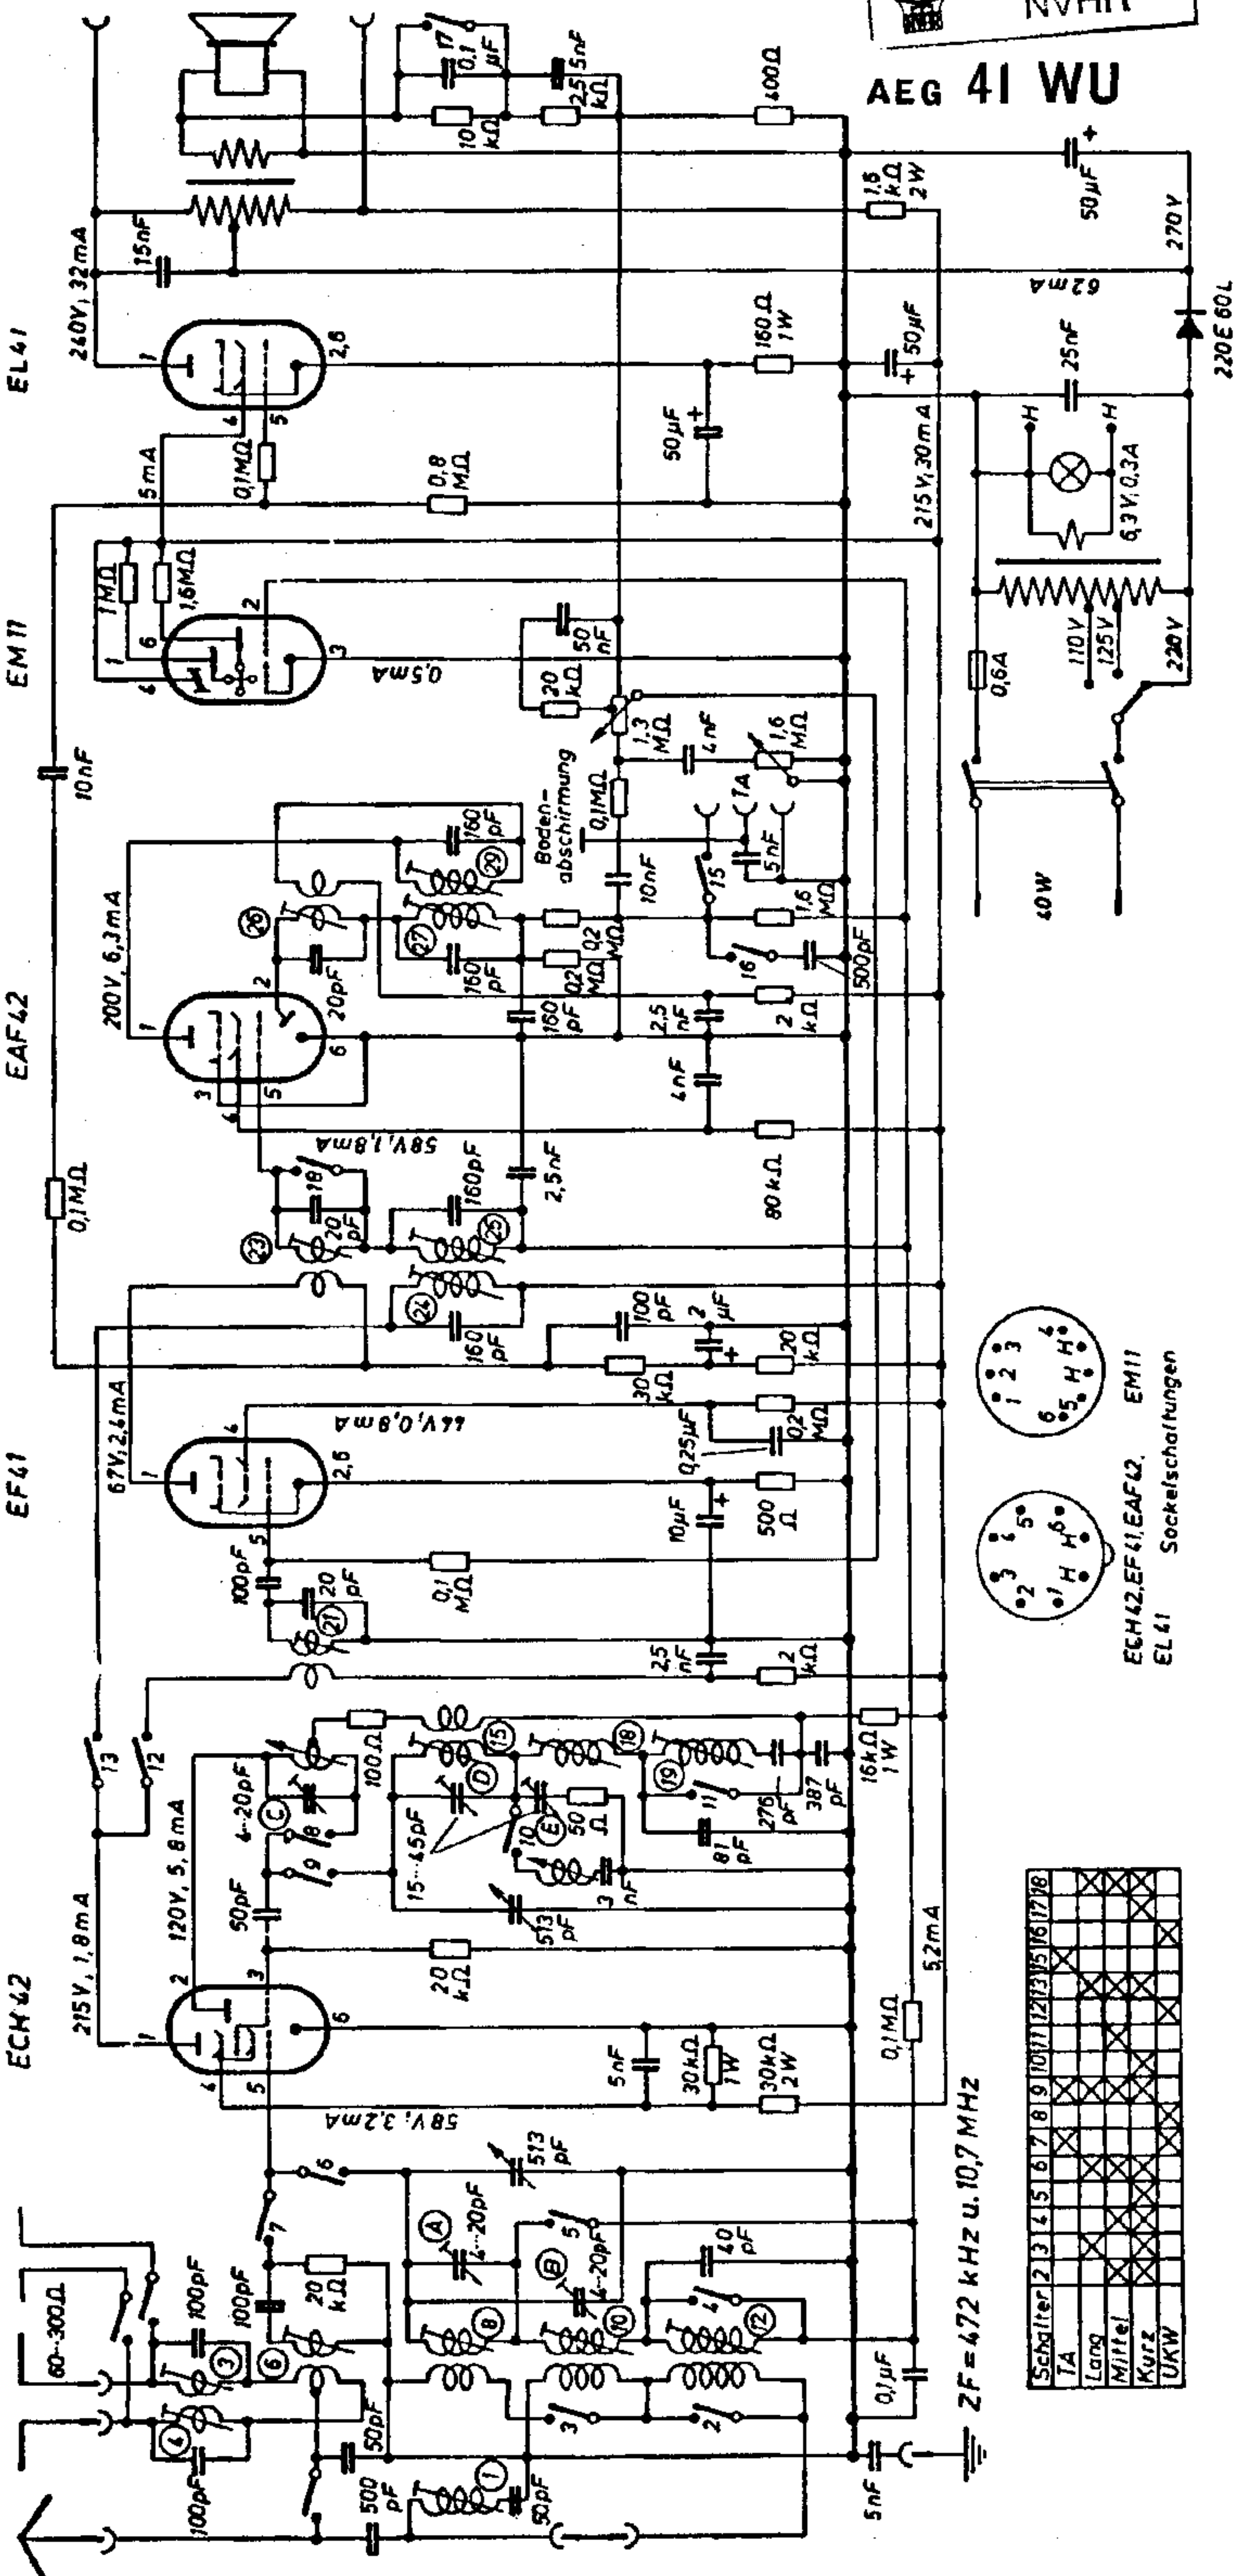

ECH42, EF41, EAF42, EM11
EL41 Sockelschaltungen

Schalter	2	3	4	5	6	7	8	9	10	11	12	13	15	16	17	18
TA																
Lang																
Mittel																
Kurz																
UKW																

ZF = 472 kHz u. 10.7 MHz

220E 60L