

B.T.H.
ELECTRIC GRAMOPHONE
PICK-UP
WITH ADAPTORS.

INSTRUCTIONS FOR FITTING.

This Pick-up is supplied with a range of four Adaptor Sockets, which enable it to be fitted to any type of Gramophone Tone Arm.

These adaptors are numbered (1) (2) (3) (4) and are suitable for fitting to the following types of tone arm respectively :—

- (1) Flexible adaptor. Suitable for tone arms having diameters from 16.5 mm. to 18 mm.

Set slope of Pick-up to correspond with this edge.

Bend this portion vertically upright.

BASE.

A.

Ned. Ver. v. Historie v/d Radio

- (2) Flexible Adaptor. Suitable for tone arms having diameters from 18 mm. to 20 mm.
- (3) Rigid Adaptor. This adaptor is supplied specially for use with the Columbia Tone Arm No. 9 fixing, and is the one which is attached to the pick-up when packed.
- (4) Rigid Adaptor. This adaptor is supplied specially for use with H.M.V. No. 5a fixing.

If it is found that the particular adaptor attached to the pick-up when purchased is not the one required, it can be readily removed by unscrewing the small screw which will be found in the centre of adaptor. Select the adaptor required and secure by again inserting the screw taking care that the small hole at side of central hole is engaged with the dowel pin on the body of pick-up.

In fitting the pick-up to tone arm it is MOST IMPORTANT that this is placed at the correct angle with respect to the record, namely 57° . A ready means of checking this angle is provided by this Instruction Leaflet. Turn the leaflet over and on the back will be found a printed line. Fold the leaflet upwards at right angles along the line. Place the portion marked "Base" flat on the record and the corner marked "A" towards the needle end of pick-up in such a way that the sloping edge of leaflet rests alongside the body of the pick-up. Adjust the pick-up so that its angle coincides with this marked edge of leaflet.

The two terminals for connecting to Wireless Set or Amplifier are located on the moulded body on underside of pick-up.