

Discafoon


**Operating Instructions
and
Guarantee Card**



The world's most revolutionary record player

OPERATING INSTRUCTIONS

1. BATTERY LOADING AND REPLACEMENT: Rotate the coin slotted screw in the bottom of case a quarter turn to free battery compartment door. Pull out the two stud-type connectors and fit onto two 9 V. batteries, PP9, DT9, VT9 or equivalent. Place in compartment so that the two stud type connectors are facing towards the battery compartment aperture, and second battery in reverse position. Locate the projecting edge first when replacing the compartment cover. Exhausted batteries may leak and should not be left in the set for a long period.

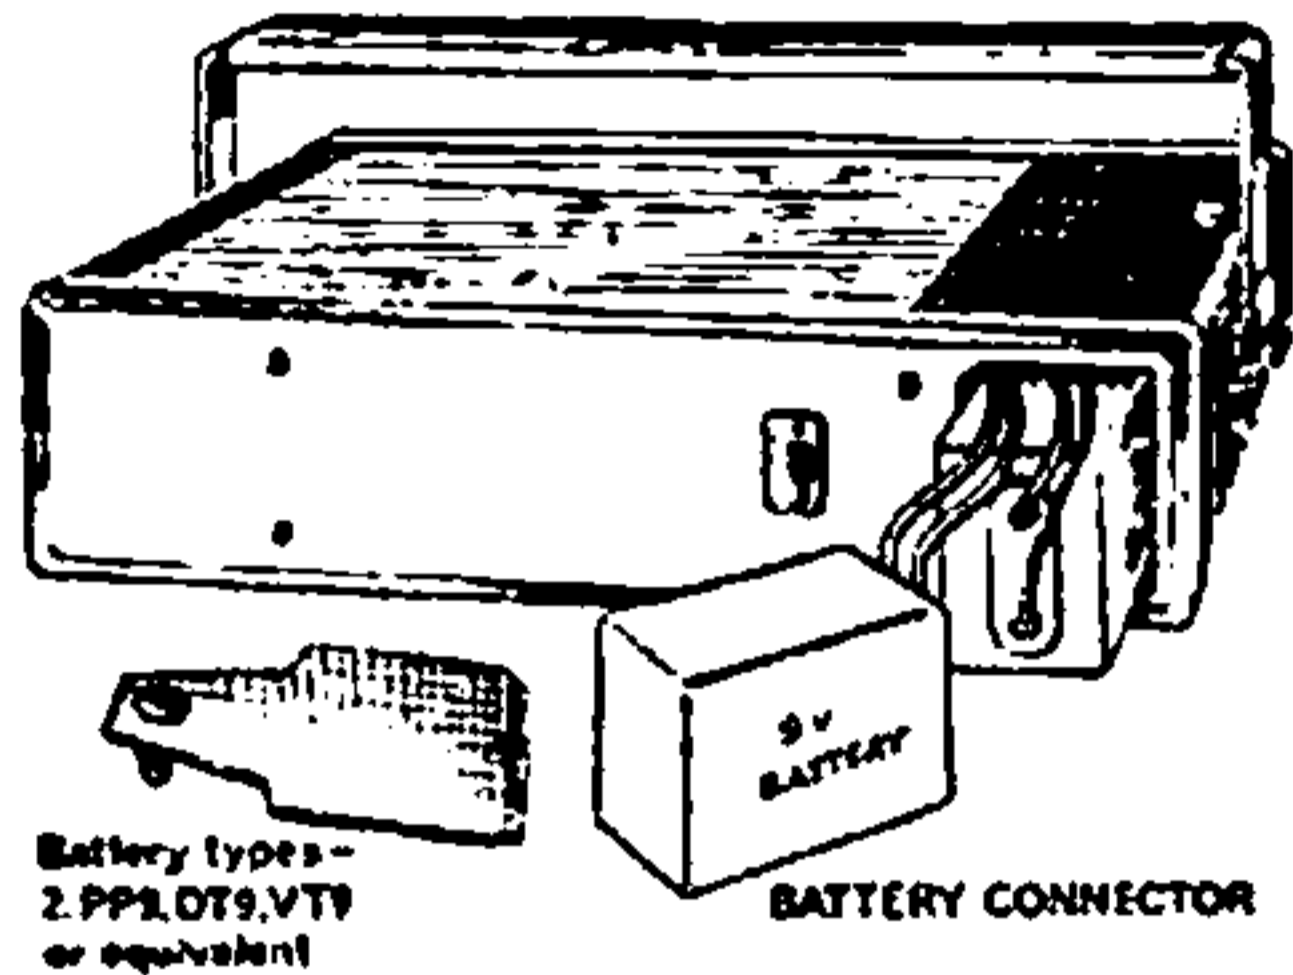

2. INSERT RECORD INTO RECORD SLOT making sure record has dropped into position. Press Start button and your Discatron will play. To reject press Reject button, record will cease playing and stylus will return to start play position. The volume and tone controls are marked on the fascia panel.

IMPORTANT

Dust or dirt will effect the efficiency of your DISCATRON make sure your records are clean before insertion.

3. LOOKING AFTER YOUR DISCATRON: Ensure that the Discatron is not placed where sand, grit, water, dust, etc. can get inside.

4. THE DISCATRON is a precision instrument and if treated with reasonable care should give a lifetime of enjoyment.

INSTRUCTIONS FOR REPLACING STYLUS

First withdraw the two connecting legs at the rear of cartridge with a small pair of pliers or tweezers. Slide the cartridge out of the housing by pushing the small rectangular location pip with a screw driver upwards, towards the amplifier. Care must be taken not to disturb the setting of the silver spring and lift lever. Having removed the cartridge it is then a simple matter to replace the stylus, but care must be taken not to break bonding of the stylus damping. Re-assemble in the reverse manner.

CARTRIDGE: COSMOCORD GP 79.
SPECIAL NOTE

The start button is connected to the playing mechanism by a steel rod, undue pressure on the button is not necessary when depressing it will click into the fixed position.

GUARANTEE

TERMS AND CONDITIONS

1. The guarantee only becomes effective if the Guarantee Registration Card is duly completed and returned to the Company within seven days of delivery of the equipment.
2. The guarantee will apply only if the equipment has been purchased from a recognised radio dealer and if the equipment is the subject of a hire purchase agreement only providing that instalments have been paid as they become due.
3. The guarantee does not cover stylus, cartridge or batteries supplied with the equipment; these items are subject to such terms and conditions of guarantee as may be offered in respect of them by the separate manufacturers.
4. The guarantee does not cover defects arising from fair wear and tear, accident, neglect or misuse; or from incorrect installation or operation or battery leakage or use other than that described in the instruction booklet.
5. The guarantee does not cover consequential loss or damage however arising and all liability in respect of any third party is expressly excluded.
6. The guarantee will be rendered invalid if the equipment is altered, modified or transformed in any way without the written consent of the Company or if any components or accessories are replaced by types not specified by the Company.
7. The guarantee is applicable only to the customer and is not transferable.
8. The guarantee will be rendered invalid if the serial number of the equipment is altered or defaced.
9. Any claim under this guarantee may be made through the Discatron Dealer from whom purchase was made. He will normally be able to give the necessary attention. If, for any unusual reason, this is impossible, a claim may be made to Discatron. In either event the model and serial numbers must be quoted, together with the date of purchase.
10. The customer will be required to meet the labour charge involved in the location and replacement of any faulty part under this guarantee, and the dealer's collection and delivery costs are also payable by the customer.
11. If, for any reason, it is necessary to return the equipment or any part thereof to the manufacturing source, the customer will be required to pay the cost of transport one way.
12. If, in this event, the equipment is found to be free from defect or if any loss of efficiency is due to a defective part or accessory which is included from this guarantee as indicated in any preceding condition, all costs or a minimum charge of 7s. 6d., whichever is the greater, will be payable by the customer.
13. No responsibility will be accepted for any loss of or damage to the equipment or any part thereof during transit to or return by the Company.
14. It is specifically pointed out that service in the customer's home is not included in this guarantee and in the event of this being given a charge will be made for the labour and other expenses involved.
15. This guarantee applies to the use of the equipment in Great Britain, Northern Ireland, Isle of Man, and the Channel Isles. If the equipment is taken out of these areas the guarantee becomes void.
16. No dealer nor any person or firm other than Discatron Limited has authority to vary the terms of this guarantee.

GUARANTEE REGISTRATION CARD

Model No.

Serial No. 225251

Purchaser's Name

Address

Date of Delivery

Dealer's Name

Address

The above model has been received and is to my satisfaction.

Signature

BLOCK LETTERS PLEASE