


General Description: Nine-transistor (plus two diodes), four-waveband portable receiver.



Power Supply: 9-volt (six $1\frac{1}{2}$ -volt batteries).

Wavebands: M.W. 571-187 m.; S.W.1. 187-66.7 m.; S.W.2. 66.7-25 m.; S.W.3. 25-11.5 m.

TR ₁	D ₁	TR ₂	TR ₃	D ₂	TR ₄
2SA341	0A70	2SA101	2SA101	0A70	2SB173
Conv.	D. AGC	1st IF Amp.	2nd IF Amp.	Det. & AGC	Pre. Amp.

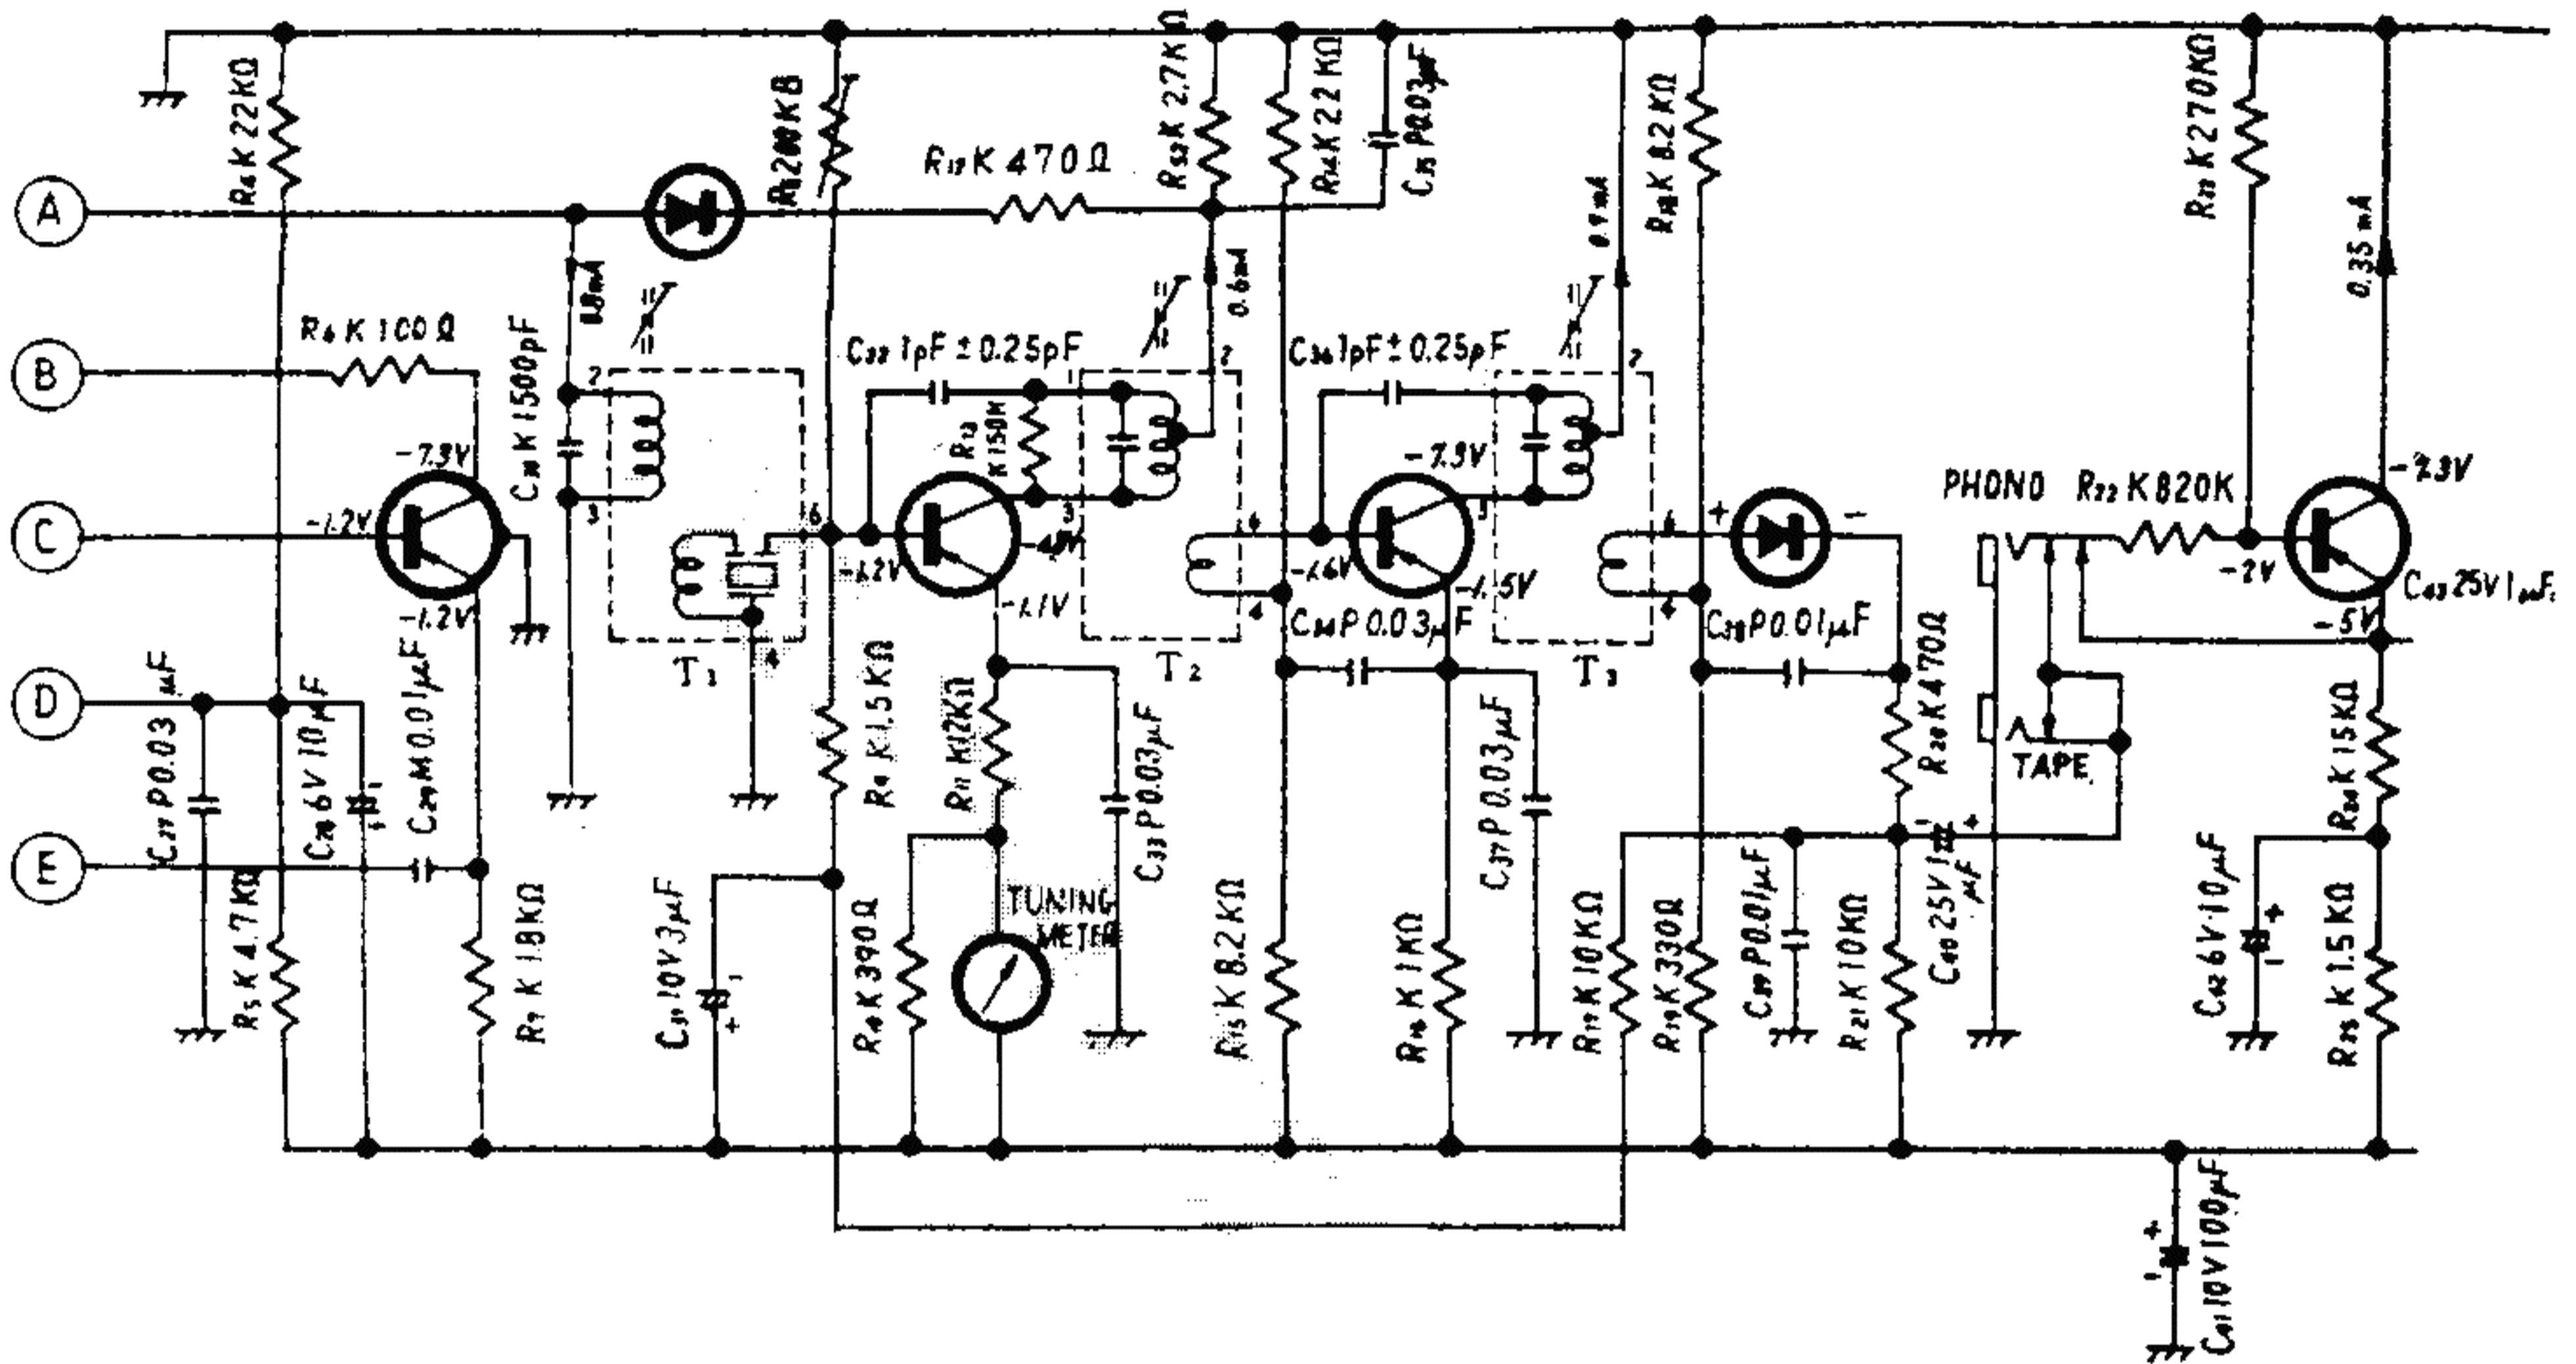

Ned. Ver. v. Historie v/d Radio

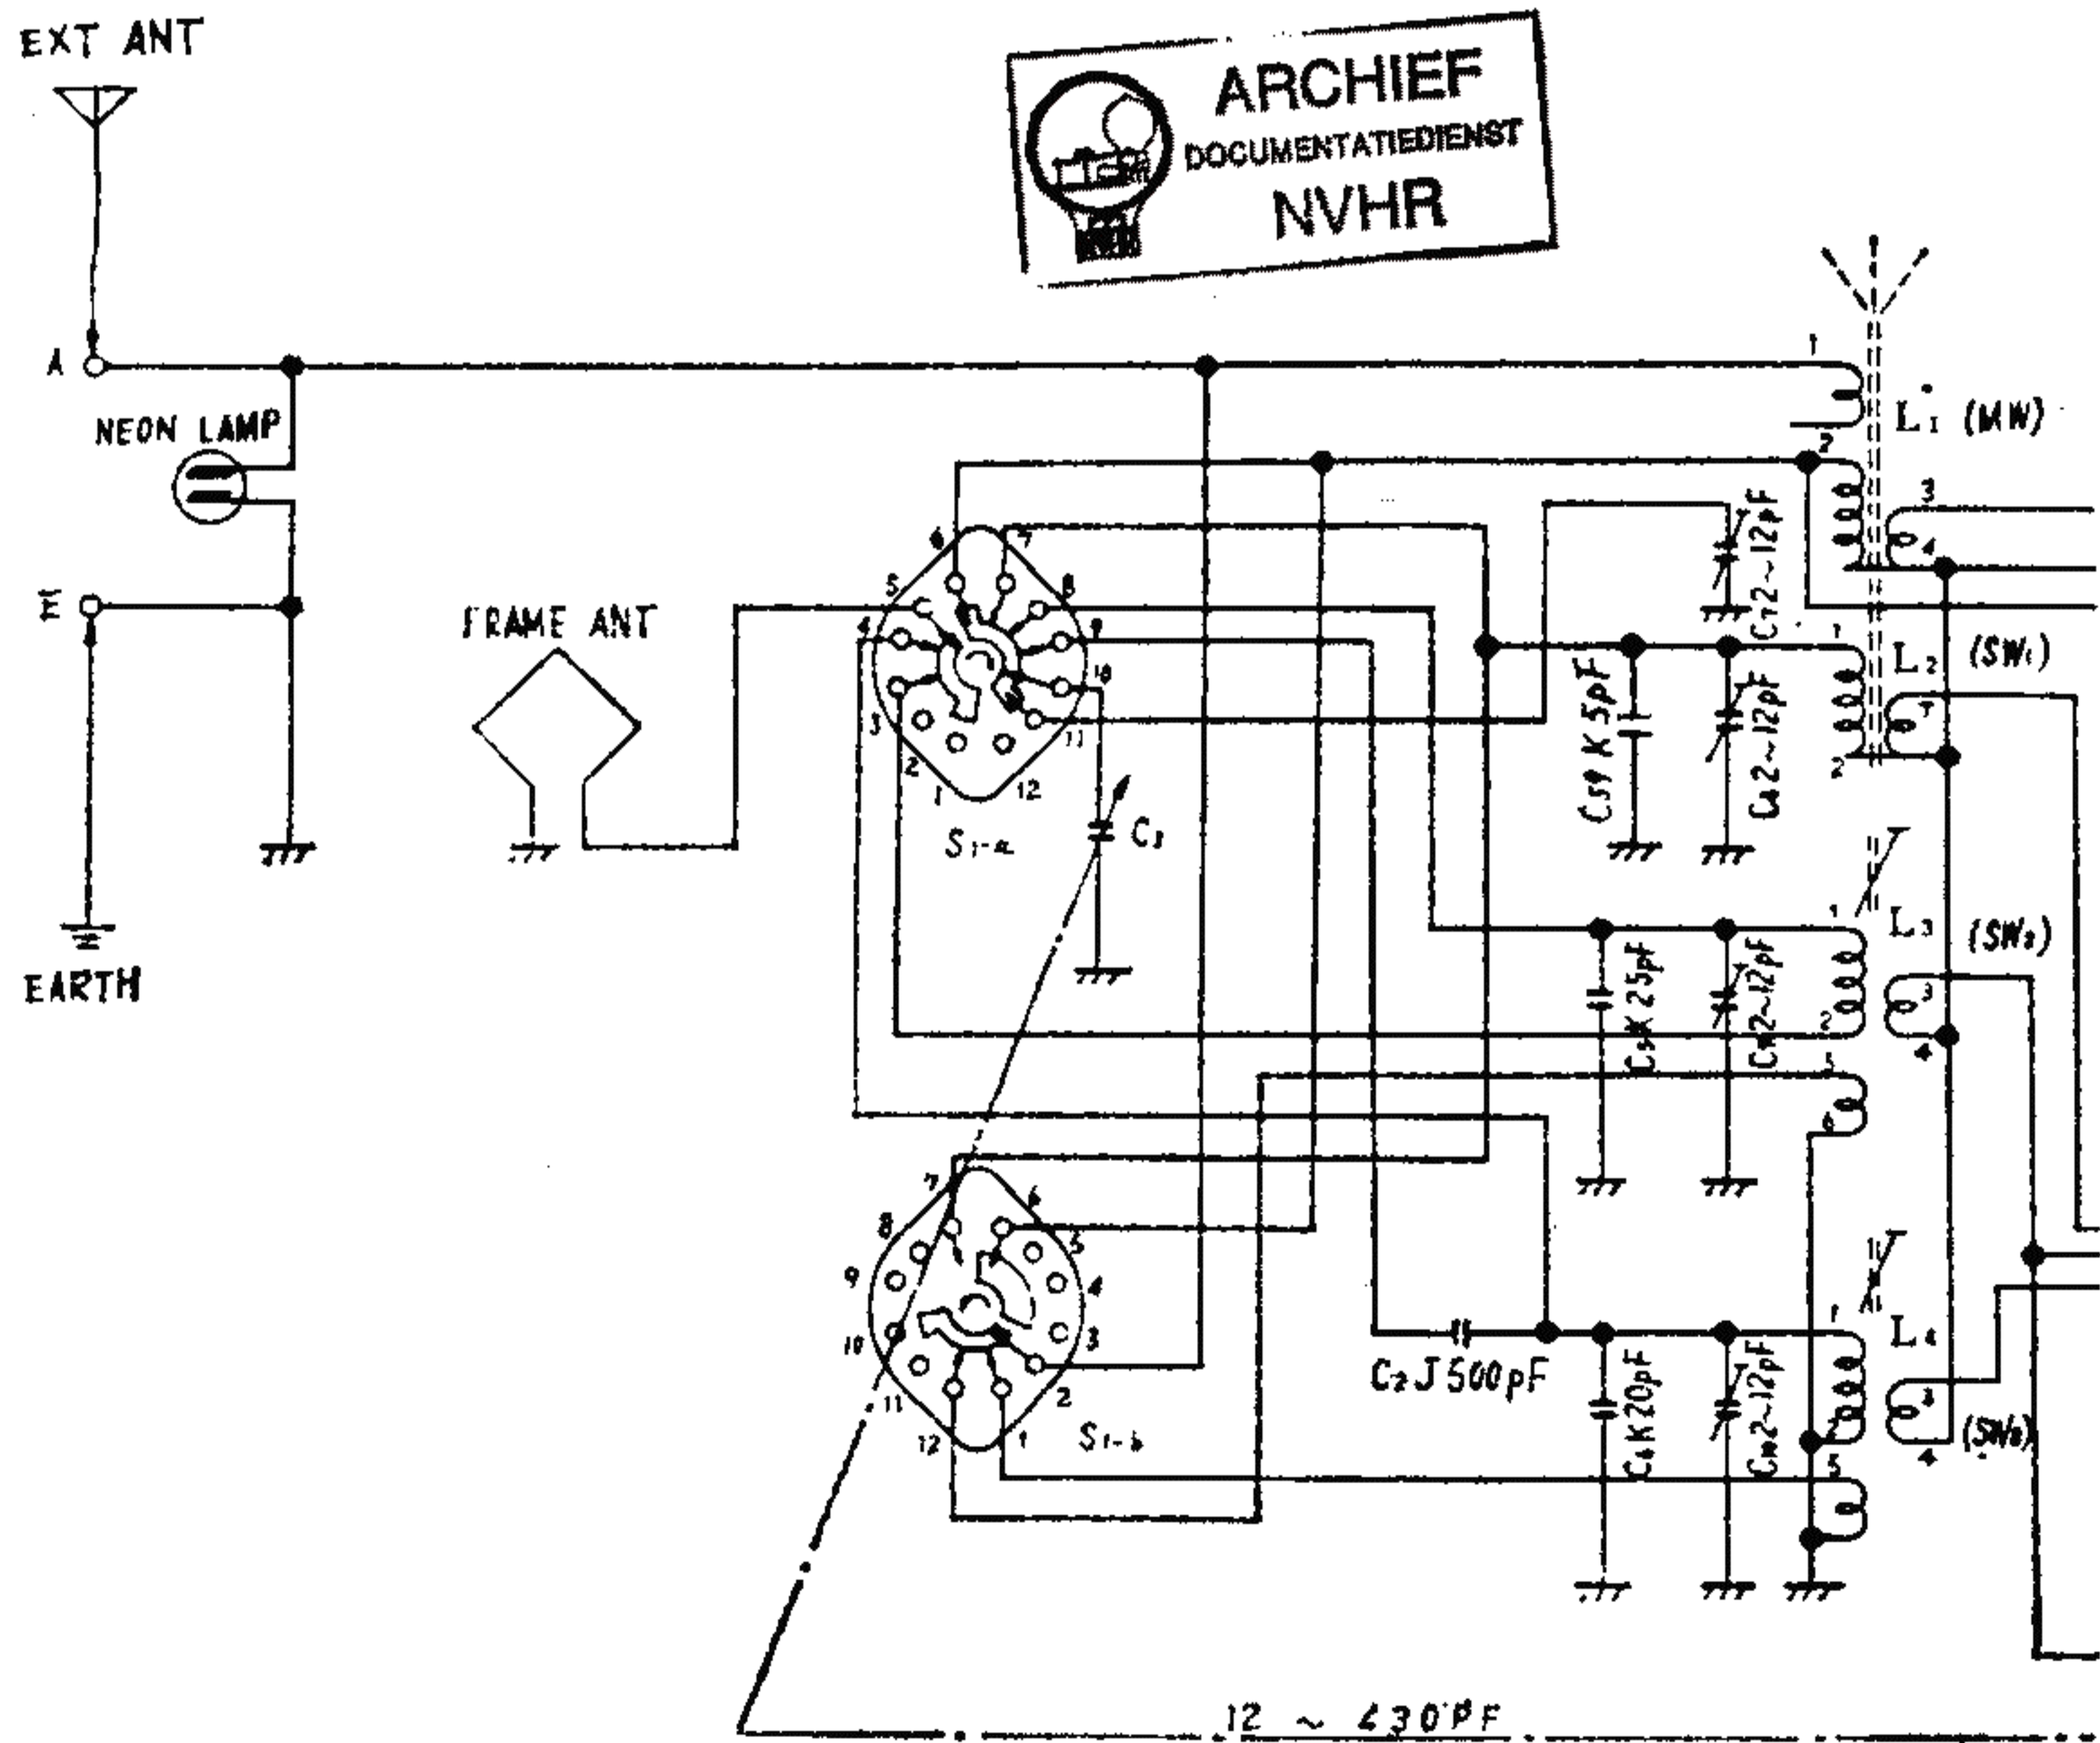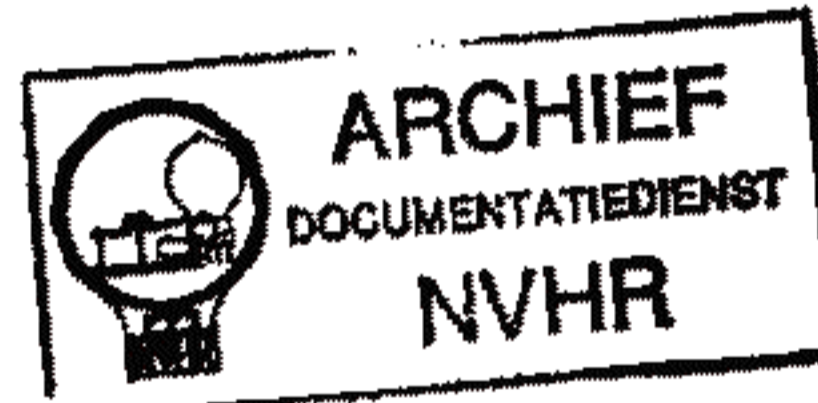

Intermediate Frequency: 470 kc/s.

Dismantling: Open the cover of the battery compartment and remove two screws from the cabinet back cover. Remove the six knobs from the cabinet and unscrew the five red painted chassis mounting screws. Remove tuning meter and dial lamp switch, unsolder speaker and battery leads. Remove chassis.

