

WARRANTY DOES NOT APPLY TO BATTERIES.

Standard Warranty

"We warrant each new PRIVAT-EAR set to be free from defects in material and workmanship under normal use and service, our obligation under this warranty being limited to making good any part or parts thereof which shall, within ninety (90) days after delivery of such set to the original retail purchaser, be returned to us through our distributor or dealer with transportation charges prepaid, and which our examination shall disclose to our satisfaction to have been thus defective; this warranty being expressly in lieu of all other warranties expressed or implied, and of all other obligations or liabilities on our part, and we neither assume nor authorize any representative or other person to assume for us any other liability in connection with the sale of our product.

This warranty shall not apply to any set which shall have been repaired or altered in any way so as, in our judgment to affect its stability or reliability, nor which has been subject to misuse, negligence or accident, nor which has had the serial number altered, effaced or removed. Neither shall this warranty apply to any set which has been connected otherwise than in accordance with the instructions furnished by us."

Privat-ear
CORPORATION

2016 BRONXDALE AVE., NEW YORK 60, N. Y.

BE SURE TO READ INSTRUCTIONS BEFORE USING

The PRIVAT-EAR Pocket Radio is a precision built radio. For your continued satisfaction, handle it as you would any fine instrument.

TO OPERATE PRIVAT-EAR POCKET RADIO:

1. Pull antenna out to full length so that ALL four telescoping sections are exposed. NOTE: The "OFF-ON" switch is built into the antenna. When the antenna is pulled all the way out, the PRIVAT-EAR Pocket Radio is ON. Touching antenna with hand will interfere with reception.
2. Place phone tip in ear so that it fits comfortably.
3. Holding PRIVAT-EAR Pocket Radio in left hand, turn the volume control clockwise as far as possible. (About $\frac{3}{4}$ of a revolution.) The letters "VOL" appear on the case beneath the volume control. DO NOT TRY TO TWIST

If the volume of the PRIVAT-EAR Pocket Radio drops off, check the batteries as follows:

1. Lift up tab on lower back of case and remove lower cover. First try replacing the two 1½ volt pen-lite cells. They may be obtained at any drug store. The 1½ volt cells should give 15 to 20 hours of operation. Be sure to put the end marked + on the batteries up, as shown on the diagram beneath the batteries. **IMPORTANT—TO PROTECT TUBES: DO NOT MIX THE LOCATIONS OF THE LARGE AND SMALL BATTERIES.** Check the upper and lower contact plates for good contact with the batteries. If necessary, remove a little of the paper wrapper on the batteries.
2. If replacing the 1½ volt batteries does not bring volume up to desired level, replace the 22½ volt (large) battery. Replacements may be obtained at any radio supply store. The 22½ volt battery should operate for 75 to 100 hours.

In the event of damage to the set, repairs can be made by any well qualified radio repair shop.

THE CONTROL KNOB BEYOND THE STOP. Remember that the "OFF-ON" switch is not on the volume control.

4. The right-hand knob is the station selector. The numbers on the case, 6, 9, and 16, correspond to 600 kilocycles, 900 kilocycles, and 1600 kilocycles. The numbers will serve to approximately locate the station desired. Turn the station selector knob **SLOWLY** until maximum volume of the station desired is obtained. Then turn the volume control back for desired volume.
5. The PRIVAT-EAR Pocket Radio may then be placed in the breast pocket of your shirt or coat. After placing in pocket, it may be necessary to turn volume up slightly.
6. Push antenna all the way down when not in use, so there will be no battery drain.
7. To avoid microphonics, do not tap case or antenna.