

SCHAUB-LORENZ MUSIC CENTER

OPERATING INSTRUCTIONS

Press button marked RADIO to operate.

On the radio panel there are 5 selector buttons :

No. 1 Button Marked AUTOM Prevents Drift on V.H.F.

No. 2 Button Selects Long Wave.

No. 3 Button Selects Medium Wave.

Discant means tone.

Other knobs are tuning, bass and volume controls.

No. 4 Button Selects Short Wave.

No. 5 Button Selects V.H.F.

To bring tape recorder into operation press button marked CENTER.

To record, twist button marked AUFNAHME and press (when the time scale is filled with red marker the track is fully recorded), press stop button. Continue recording on next track.

Please note that there are 9 recording tracks for each of the sections on the circular dial marked A—O. Figures on the panel above dial correspond to the 9 tracks.


Always depress stop button after each recording (there is a time lapse of 2 seconds), this will also bring the radio back on.

When you have made the recordings of your choice, press button marked WIEDERGABE. Your recordings will then be played automatically.

Pause button can be used if you wish to cut speech on music recording.

To bring radio into operation, after recordings, always depress stop button.

To switch off Music Center completely, depress radio button again.

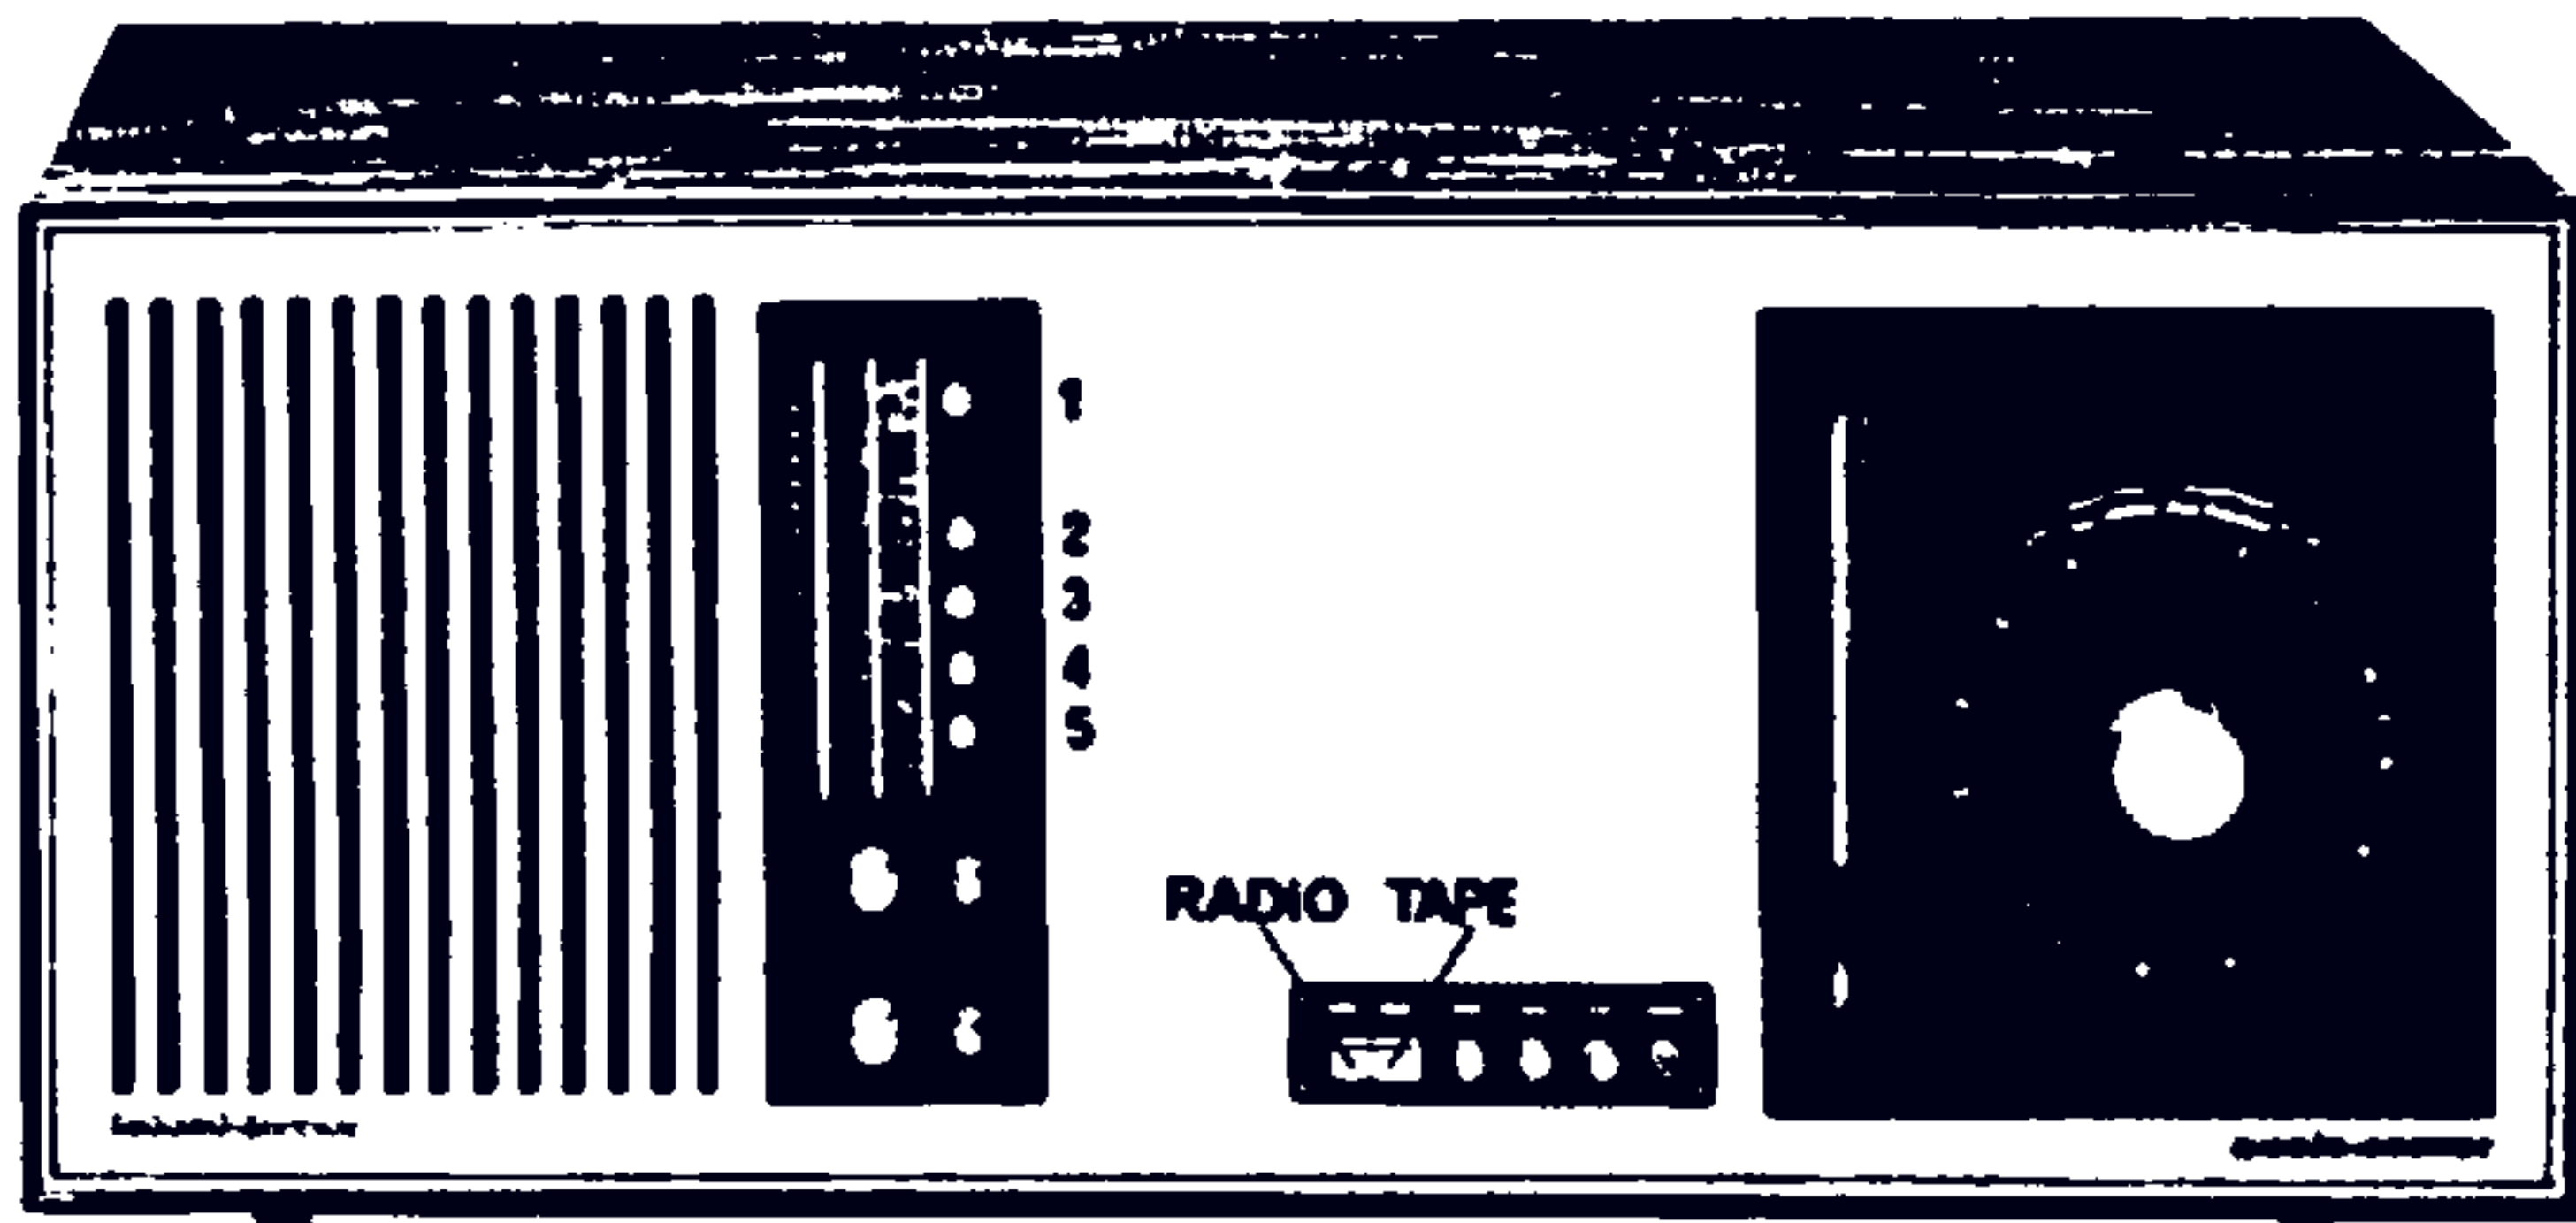

To use record player, use adaptor supplied - plug adaptor into back of set, and connect turntable using a 5 pin plug and connect to 5 pin socket or adaptor. Your records can then be played using the music centre as an amplifier. Your records can be taped at the same time.

The same adaptor can be used with a microphone, or another tape recorder.

An extension speaker can be added if required.

Ned. Ver. v. Hist

For best results when recording, 10 minutes should be allowed for warming up period on playback (button marked Wiedergabe).