



SERVICE NOTES

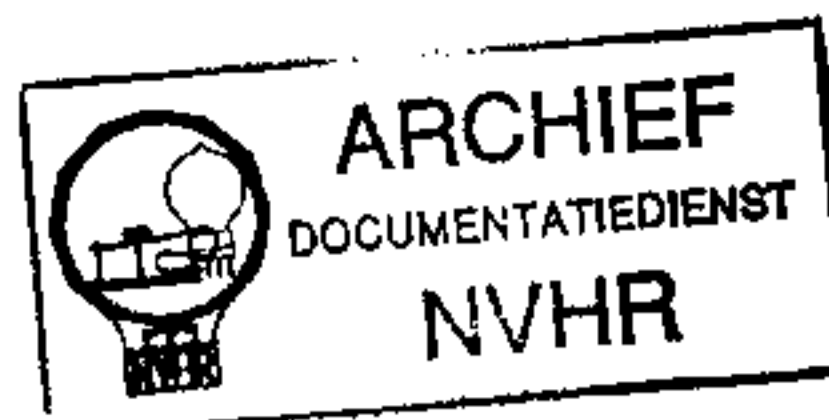

GRAMOPHONES

8448A-02-12-30

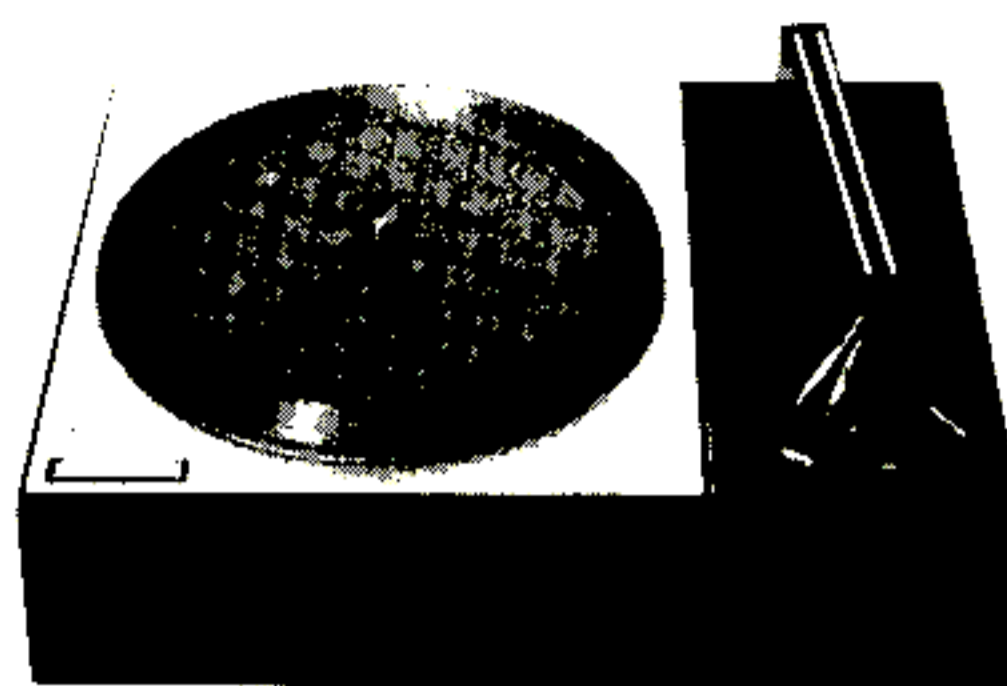

TGR 1627

The 8448A is a record player on a tray.

For repair and replacement of parts of this player, see the Service Notes of the 8447A, with the exception of the parts mentioned below.

4822 444 50099	Tray
4822 462 40128	Rubber foot
4822 502 30002	Screw to fix mains flex
4822 502 10047	Screw 4x8 mm to fix tray
4822 263 40003	Voltage adapter plate
4822 263 30056	Voltage adapter knob
4822 502 10094	Screw 3x10 mm to fix voltage adapter

De 8448A is een platenspeler op bak.

Voor reparatie en vervanging van onderdelen van deze speler zie de servicedocumentatie van de 8447A, met uitzondering van de codenummers in de onderstaande stuklijst.

4822 444 50099	Bak
4822 462 40128	Rubbervoet
4822 502 30002	Schroef voor snoerbevestiging
4822 502 10047	Schroef 4x8 mm voor bakbevestiging
4822 263 40003	Carrouselplaat
4822 263 30056	Carrouselknop
4822 502 10094	Schroef 3x10 mm voor borging van carrouselknop

Le 8448A est un tourne-disque sur socle.

Pour la réparation et le remplacement des pièces du tourne-disque consulter la documentation de Service du 8447A, à l'exception des numéros de code dans la liste ci-dessous.

4822 444 50099	Socle	
4822 462 40128	Pied	
4822 502 30002	Vis de fixation pour cordon secteur	
4822 502 10047	Vis 4x8 mm pour fixation du socle	
4822 263 40003	Plaquette de carrousel	
4822 263 30056	Bouton de carrousel	
4822 502 10094	Vis 3x10 mm pour fixation du bouton de carrousel	CS7254

SERVICE INFORMATION										
---------------------	--	--	--	--	--	--	--	--	--	--