


MANUAL OF 1952 MOST-OFTEN-NEEDED RADIO DIAGRAMS

Met dank aan Bjarne Stridsberg

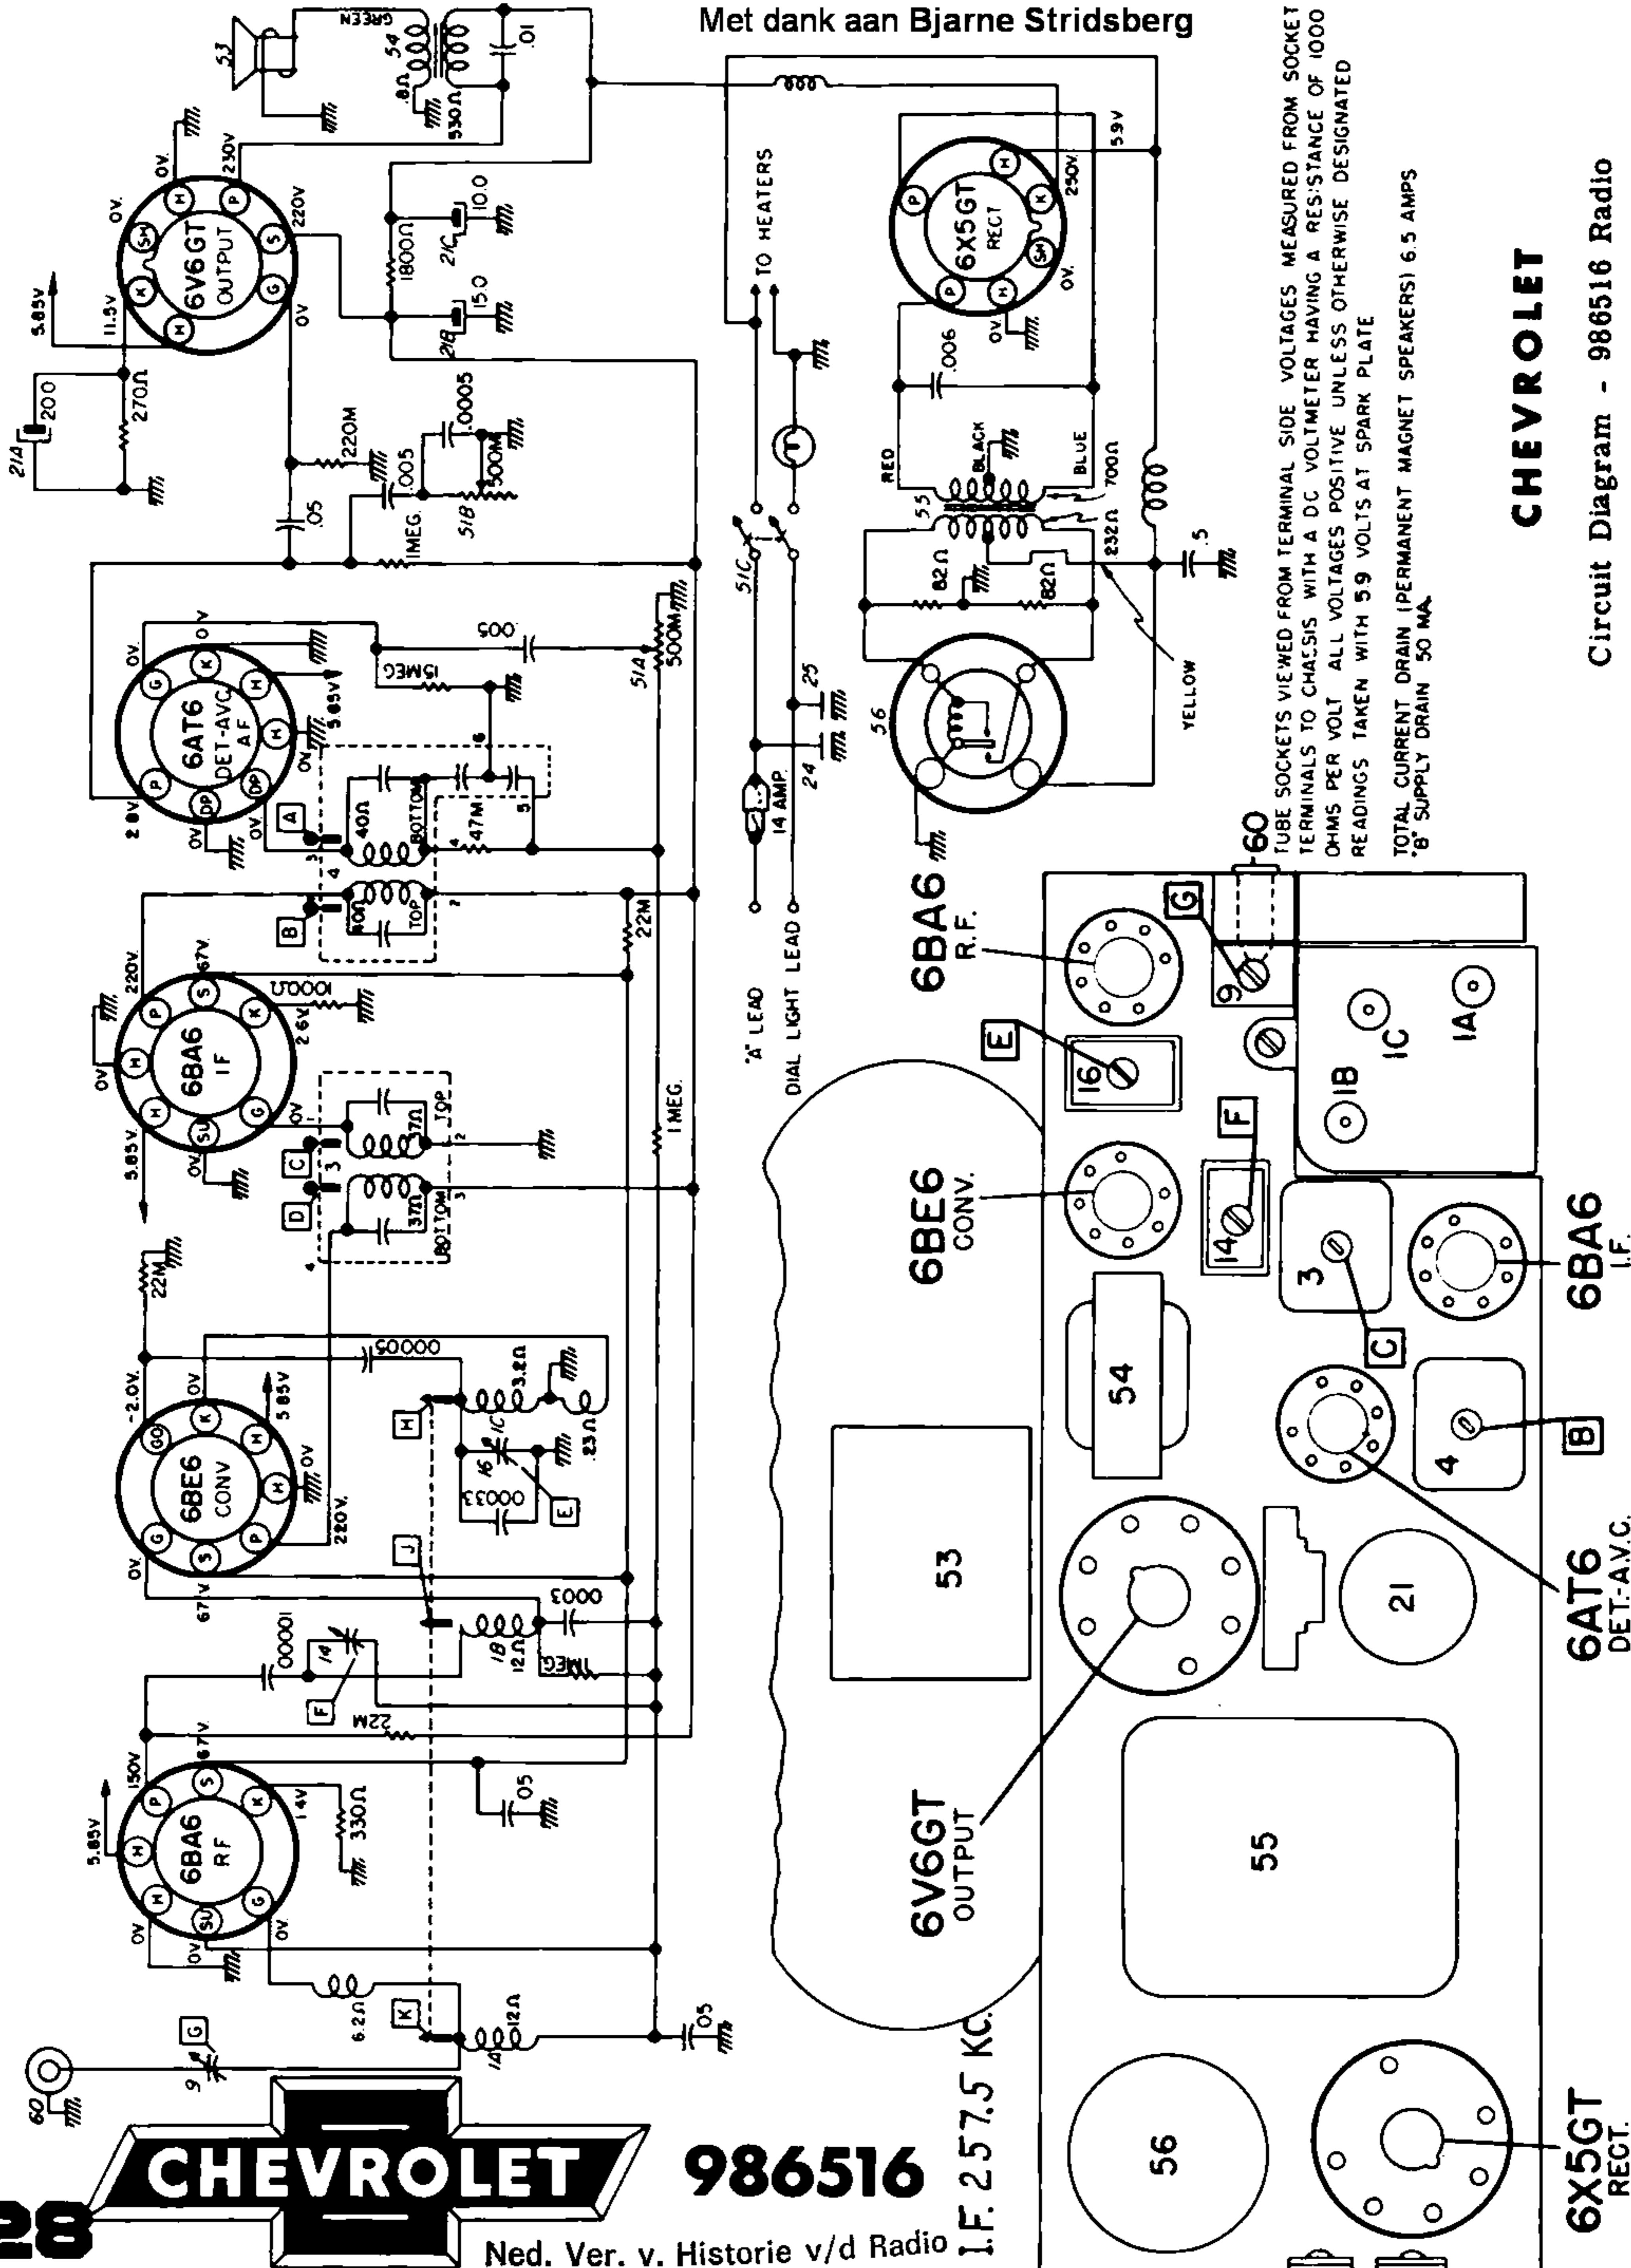

CHEVROLET

Circuit Diagram - 986516 Radio

TUBE SOCKETS VIEWED FROM TERMINAL SIDE VOLTAGES MEASURED FROM SOCKET TERMINALS TO CHASSIS WITH A DC VOLTMETER HAVING A RESISTANCE OF 1000 OHMS PER VOLT ALL VOLTAGES POSITIVE UNLESS OTHERWISE DESIGNATED READINGS TAKEN WITH 59 VOLTS AT SPARK PLATE

TOTAL CURRENT DRAIN (PERMANENT MAGNET SPEAKERS) 6.5 AMPS
 "B" SUPPLY DRAIN 50 MA.