


Zie Philips 22RR293

RADIO 7332T/00R

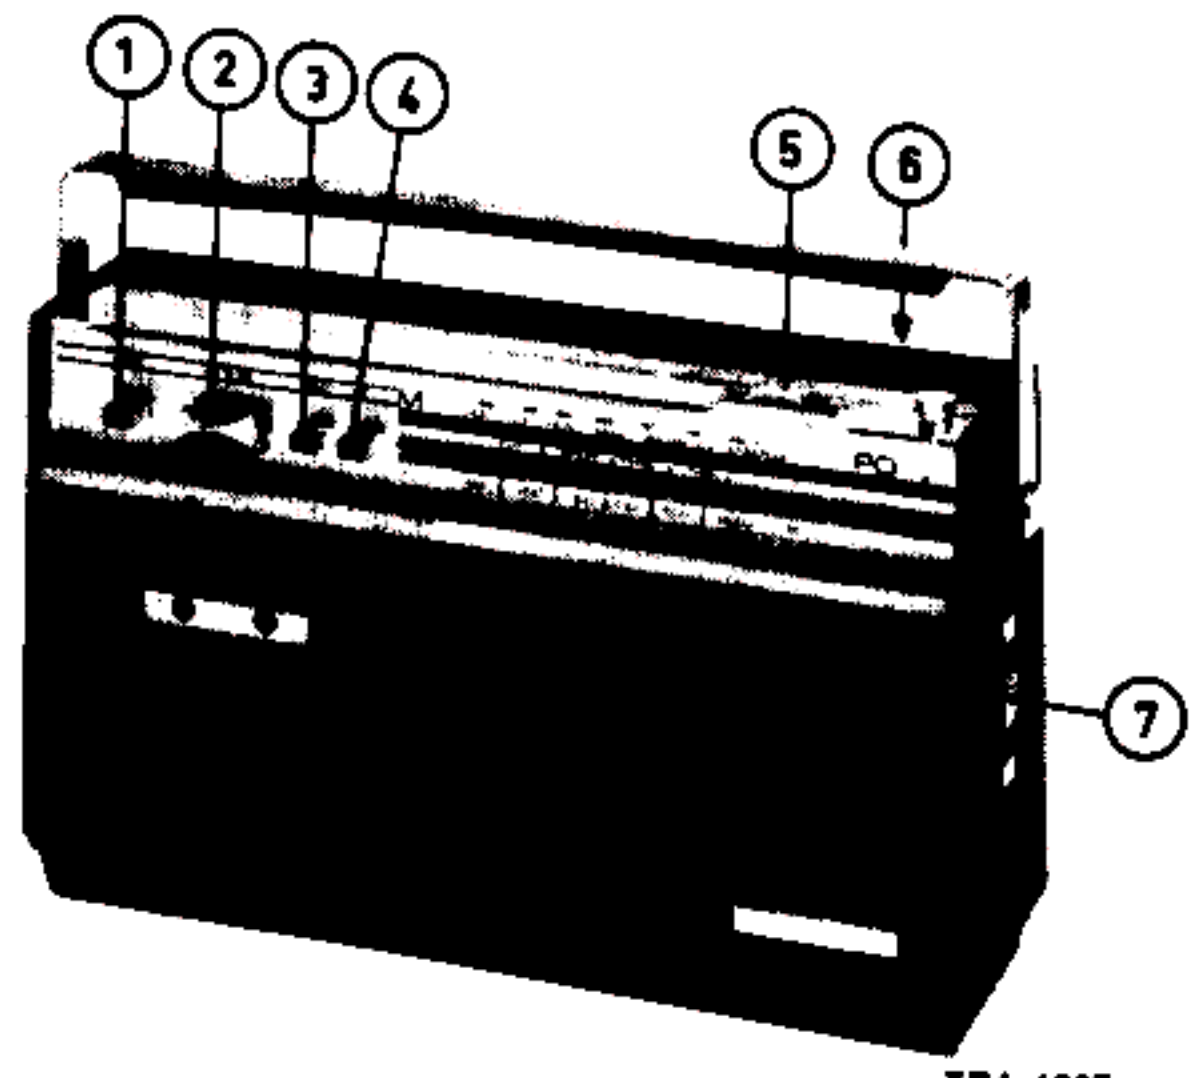

TRA 4005

① Tone switch/speaker switch/
frequency switch erase osc.
Toonschakelaar/luidsprekerschakelaar/
frequentieschakelaar wisoscillator
Commutateur de tonalité/commutateur
haut-parleur/commutateur de fréquence SK-F
osc. d'effacement
Klangschalter/Lautsprecherschalter/
Frequenzschalter Löschosz.
Commutatore di tono/commutatore alto-
parlante/commutatore della frequenza
dell'oscillatore di cancellazione

⑤ Tuning
Afstemmen C304
Syntonisation
Abstimmung
Sintonia

⑥ LW/MW-switch
LG/MG-schakelaar SK-A
Commutateur GO/PO
LW/MW-Schalter
Commutatore OL/OM

② Playback/winding and rewinding
Weergave/op- en terugspoelen SK-B
Reproduction/bobinage et rebobinage
Wiedergabe/Auf- und Rückspulen
Riproduzione/avvolgimento e riavvolgimento

② Recording SK-B
Opname + SK-B
Enregistrement +
③ Aufnahme SK-D
Registrazione

④ Cassette ejector
Kassette uitwerper
Ejecteur de cassette
Kassettenauswerfer
Espulsore della cassetta

⑦ On/off + volume control SK-G
Aan/uit + volumeregelaar +
Marche/arrêt + commande de volume R305
Ein/Aus + Lautstärkeregler
In marcia/fermo + controllo di volume

Supply voltages	110-220 V~ 9 V _{DC} (6x1.5 V)	Voedingsspanningen	Tensions d'alimentation	Speisespannungen	110-220 V~ 9 V _{DC} (6x1.5 V)	Tensioni d'alimentazione
Consumption (without signal)		Verbruik (zonder signaal)	Consommation (sans signal)	Verbrauch (ohne Signal)		Consumo (senza segnale)
Radio	9 V _{DC} 25 mA 220 V~ 6 mA	Radio	Radio	Radio	9 V _{DC} 25 mA 220 V~ 6 mA	Radio
Recording	9 V _{DC} 100 mA 220 V~ 11 mA	Opname	Enregistrement	Aufnahme	9 V _{DC} 100 mA 220 V~ 11 mA	Registrazione
Playback	9 V _{DC} 75 mA 220 V~ 9 mA	Weergave	Reproduction	Wiedergabe	9 V _{DC} 75 mA 220 V~ 9 mA	Riproduzione
Output power	400 mW	Uitgangsvermogen	Puissance de sortie	Ausgangsleistung	400 mW	Potenza uscita
Loudspeaker	15 Ω	Luidspreker	Haut-parleur	Lautsprecher	15 Ω	Altoparlante
IF	452 kHz	MF	FI	ZF	452 kHz	FI
Tape speed	4.75 cm/sec	Bandsnelheid	Vitesse de défilement	Bandgeschwindigkeit	4.75 cm/sec	Velocità
Number of tracks	2	Aantal sporen	Nombre de piste	Spurzahl	2	Numero piste
Frequency erase osc.	33-50 kHz	Frequentie wisoscillator	Fréquence d'osc. d'effacement	Frequenz Löschoszillator	33-50 kHz	Frequenza oscil. di cancellazione
Δ f erase osc. MW	1-2 kHz	Δ f wisoscillator MG	Δ f d'osc. d'effacement PO	Δ f Löschoszillator MW	1-2 kHz	Δ f dell'oscillatore di cancellazione OM
Δ f erase osc. LW	≥ 4 kHz	Δ f wisoscillator LG	Δ f d'osc. d'effacement GO	Δ f Löschoszillator LW	≥ 4 kHz	Δ f dell'oscillatore di cancellazione OL
Microphone	500 Ω	Microfoon	Microphone	Mikrofoon	500 Ω	Microfono
Dimensions	335x203x92 mm	Afmetingen	Dimensions	Abmessungen	335x203x92 mm	Dimensioni

