


A130 CIRCUIT DIAGRAM

The wave range switch is drawn in the "S" position. Rotate movable contacts in the direction of the arrows for "M", "L" and "G". The voltages were taken with the receiver switched to "M", under no signal conditions.

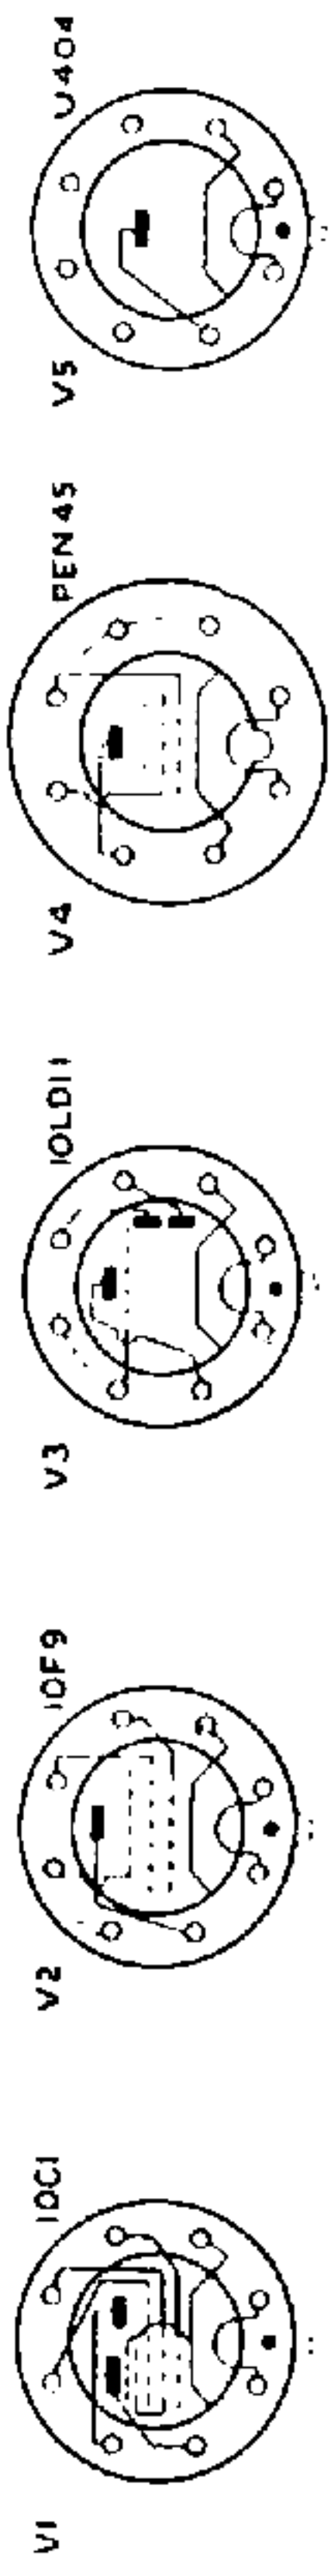

COIL RESISTANCES

These are average figures. The resistance of windings not shown is less than 1 ohm.

COIL	L3	L4	L5	L6	L7	L8	L12
OHMS	1	3.5	20.5	21	6	6	2

COIL	L13	L14	L15	L16	L17	T1 Pri.	T2 Pri.
OHMS	5.2	6	6	7.5	7.5	145	290

